

Energy Management Information System (EMIS)

Registered Electrical Energy Manager (REEM)-User Manual

Version 1.9



Important Notes

- User only can key in 3 times wrong password before the account being blocked by the system. If your account being blocked by the system, please contact the System Administrator for further assistance.
- 2. Please check in the junk email folder in your email if the verification email does not go into the inhox
- 3. Please refer to the "Guide on Selecting Subsectors and Product Types" when selecting the subsector. If predefined subsector different from the actual subsector, please change it and ensure that the product type produce by the installation is within the subsector (for Industry sector only). If there is no predefined subsector set, please select the subsector based on the Guide on Selecting Subsectors and Product Types. If you think your subsector is not in the Guide on Selecting Subsectors and Product Types, please contact System Administrator.
- 4. If the installation falls under the **industry sector**, please refer to the "Guide on Selecting Subsectors and Product Types" first when choosing the product type. The product type must be related to the subsector (product type must be in the subsector's group) defined in the EMIS as in the guideline.
- 5. If the desired product type as well as Unit of Measure (UOM) for that product are not in the dropdown list, please contact EC Administrator. We will review the request and add the product type or UOM in the registry if necessary.
- 6. The Efficient Electrical Energy Management Policy, Committee and Objective is compulsory to have as this is mentioned in the Regulations 6 (1) of Efficient Management of Electrical Energy Regulations 2008 (EMEER 2008). Failure to comply with this subregulation means the installation commits an offence under EMEER 2008.
- 7. For Commercial & Government sector, in the variables tab there is already pre-defined variables which are cooling degree days and occupancy. If the user thinks that these variables does not related to the installation they may deleted it and defined other variables.
- 8. When fill in the report, for the Energy Saving Measures (ESM) part (List, Summary of Implemented ESM & Proposed ESM) please only include those ESM for that period reported only.
- 9. PDF report generated from EMIS does not need to be sent to EC. Only signed Form A and Form B is sent to EC (hardcopy).
- 10. Baseline year is only available to be selected in PDF Report and Charts if all data for that year is complete one year. For example, year that the data is only from July December will not be available to be selected as baseline year. The data must be completed 12 months then only the year will appear in the selection.
- 11. Regression analysis can only be considered if the R² (Coefficient of Determination) value is equal or greater than 0.75.
- 12. It is responsibility of Installation and REEM user to ensure timely submission of report.


Table of Contents

1.		Intro	oduct	tion	4
	1.	1	Rep	orting Flow	4
	1.	2	Priv	ileges for REEM User	4
2.		Acc	essir	ng the System	5
	2.	1	Log	in	6
	2.2		Cha	inging Password	7
	2.	3	Ema	mail Verification8	
	2.	4	For	got Password	10
3.		Hon	nepa	ge	13
	3.	1	Ove	erview	13
	3.	2	Use	r's Setting	14
4.		Inst	allati	on	16
	4.	1	Ove	erview	16
	4.	2	Crea	ating Labels	17
	4.	3	Viev	wing Installation's Data	20
		4.3.	1	Viewing Installation's Details	21
		4.3.	2	Viewing Installation's Electricity Account Number	24
		4.3.	3	Viewing Installation's Variables	25
		4.3.	4	Viewing Installation's Fuels (if applicable)	26
		4.3.	5	Viewing Installation's Products (for Industry Sector only)	27
	4.	4	Viev	wing Report Submission	29
		4.4.	1	Reports Grid Overview	29
		4.4.	2	Reports Table	30
5.		Rep	orts.		31
	5.	1	Ove	erview	31
	5.	2	Ger	nerate Form A and Form B	32
	5.	3	Ger	nerate PDF Report	34
6.		Rep	orts	for Verification	37
	6.	1	Ove	erview	37
	6.	2	Арр	roving the Report	38
	6.	3	Reje	ecting the Report	41
		Cha	ırts		44
	7.	1	Ove	erview	44
	7.	2	Ana	llysis	45

8. <i>F</i>	lerts	
8.1	Overview 5	0
9. N	ssaging	2
9.1	Overview5	2
9.2	Create New Message Thread5	3
10.	Contact Us5	6

1. Introduction

1.1 Reporting Flow

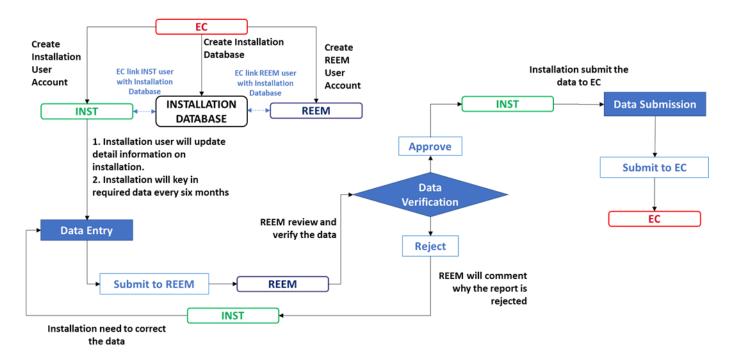

Note:

EC: Energy Commission

INST: Installation

REEM: Registered Electrical Energy Manager

1.2 Privileges for REEM User

- i. Viewing analysis for assigned installations
- ii. Viewing assigned installations
- iii. Viewing registries
- iv. Viewing reports for assigned installations
- v. EMIS messaging
- vi. Changing personal settings
 - a. Password
 - b. Name, telephone
 - c. E-mail
- vii. Turning EMIS messages to email on and off

2. Accessing the System

- 1. To access the login page, please type emis.st.gov.my in the URL.
- Energy Commission (EC) Administrator will provide the Registered Electrical Energy Manager (REEM) with the username and temporary password through the official letter. Only REEM that have been appointed by the installation as their REEM as well as having a valid certificate will be grant an access to the system.



- i. About Menu Gives an overview of the EMIS.
- ii. FAQ Menu Gives a list of Frequently Asked Question related to EMIS.
- iii. Contact Menu Gives a contact details of EC Administrator.
- iv. Manuals Menu Contain manuals for:
 - a. Installation user
 - b. Registered Electrical Energy Manager user
 - c. Guide on selecting subsectors and product types

2.1 Login




- 1. Insert the username and temporary password provided by EC Administrator.
- 2. Click Login.

Note:

i. Maximum number of attempts to log in is three times. If the user enters a wrong password more than three times, the user will get blocked. The user then need to contact EC Administrator to gain access back to the system. EC Administrator will unblock the user.


2.2 Changing Password

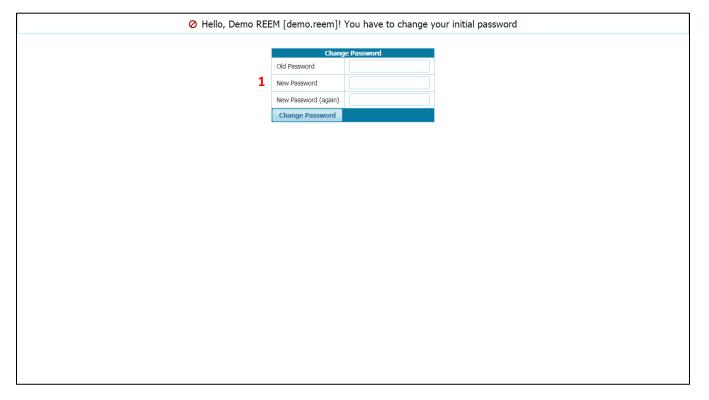

1. For the first log-in, a user is required to change the initial password. Please key in the old password and the new desired password.

- i. Password must meet the required complexity criteria:
 - a. Minimum 8 characters
 - b. Characters have to be from at least 2 of the following types
 - Lowercase letters
 - Digits


2.3 Email Verification

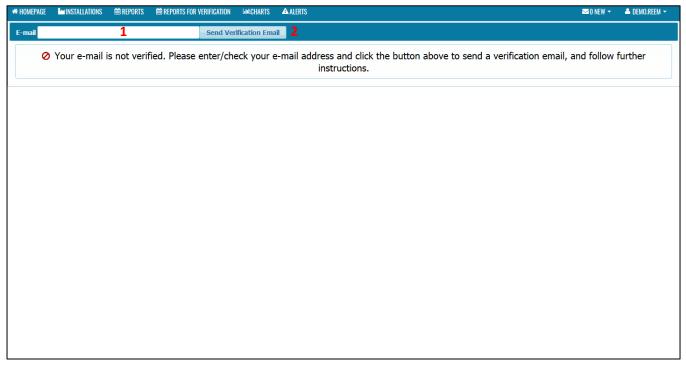

- 1. Please enter your email address.
- 2. Click on Send Verification Email.



3. Check your inbox and opened the email. Click on the link in the email.

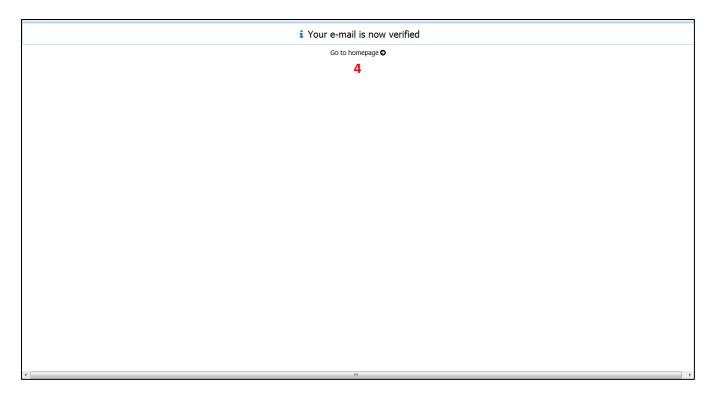


4. Your email is now verified. Click Go to Homepage

- i. All menus will be blocked until the verification is completed
- ii. Please check in the junk email folder in your email if the verification email does not go into the inbox.
- iii. Please note that whenever the email address is changed, the new address must be verified.


2.4 Forgot Password



1. At the login page, click on the Forgot Password.

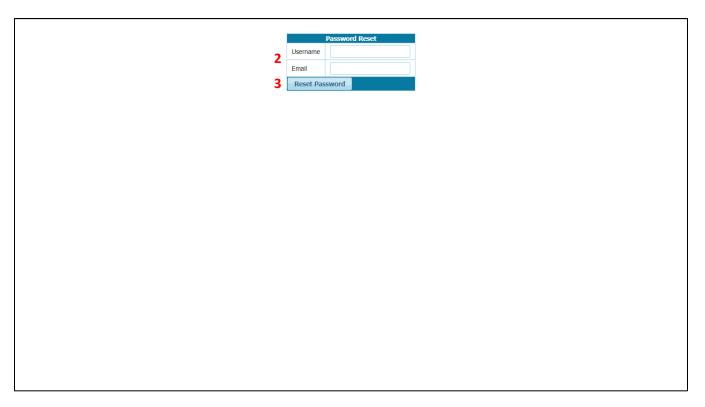

- 2. Enter the Username and Email Address (email that has been verified with EMIS).
- 3. Click on the Reset Password. An email will be sent to you which contain the temporary password.

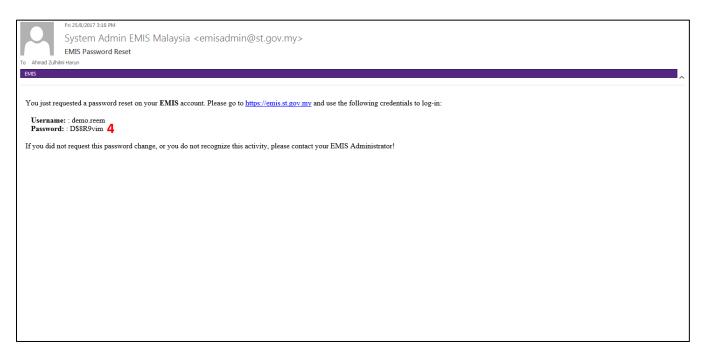

4. Open the email and please find the temporary password in the email.




5. Login into EMIS using the temporary password provided in the email.



6. User is required to change the temporary password. Please key in the temporary password and the new desired password (as per section 2.2).

3. Homepage

3.1 Overview

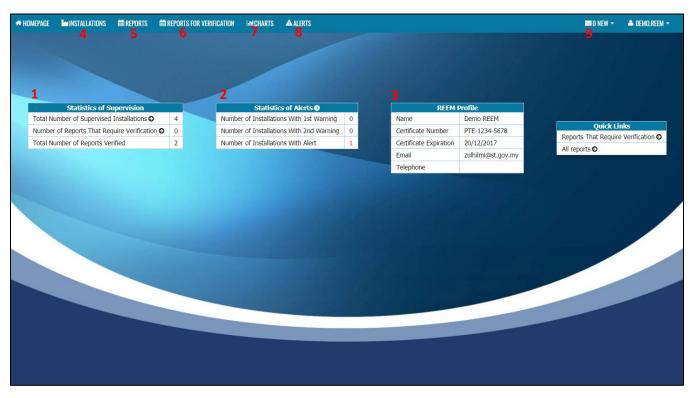


- 1. Statistics of Supervision gives an overview of the installation supervised by REEM as well as report submitted by the installation user.
- 2. Statistics of Alerts gives an overview of installation supervised by REEM that received reminder and alerts on submission of report.
- 3. REEM Profile gives an information about the REEM.
- 4. Installation tab will direct the user to their list of supervised installation.
- 5. Reports tab will direct the user to the list of report submitted by their supervised installation.
- 6. Reports for Verification tab will direct the user to the list of report that require their verification.
- 7. Charts tab will direct the user to the analysis section.
- 8. Alerts tab will direct the user to the alerts received.
- 9. Messages tab will direct the user to the messaging functionality.

3.2 User's Setting



- 1. Go to the user's profile tab.
- 2. Click My Settings.

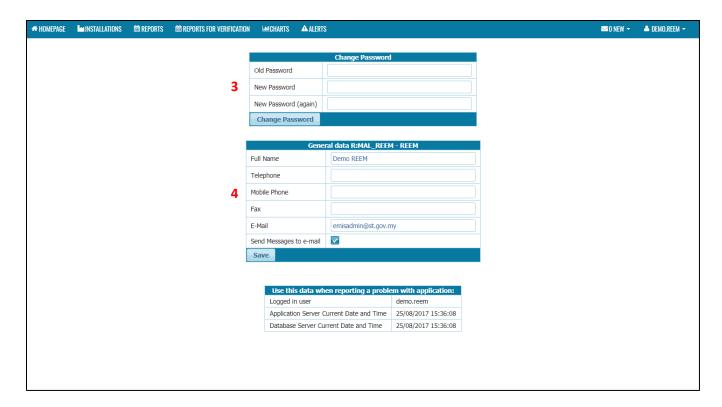


- 3. User can change their password in this page (if required).
- 4. User need to update their:
 - a. Telephone number
 - b. Mobile Phone number
 - c. Fax number

- i. If the user changes their email address, the user need to update their email address in this section.
- ii. If the Send Messages to e-mail is ticked, user will receive a notification email whenever a message is received by the user.
- iii. If the REEM's certificate expiry date at the homepage does not updated after renewal, please inform EC Administrator to update the latest expiry date. The certificate expiry date cannot be updated in this section. Only EC Administrator can update the REEM's certificate expiry date.


4. Installation

4.1 Overview

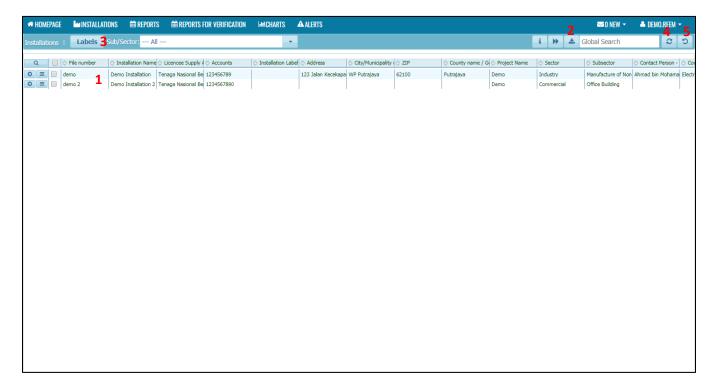

- 1. This section will show list of installation supervised by REEM.
- 2. Export button allows the user to export the table to Excel or CSV format.
- 3. Labels button allows the user to label any installation to specific label/tag.
- 4. Refresh button allows user to refresh the data in the table.
- 5. Reset Table allows user to reset the table to its original state.


i. Working with tables:

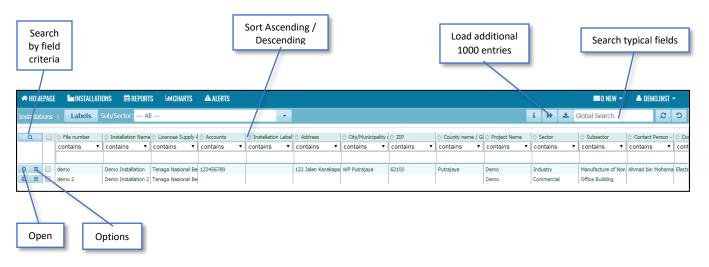


4.2 Creating Labels



- 1. Tick the box for which you want to label the installation
- 2. Click on Labels button.

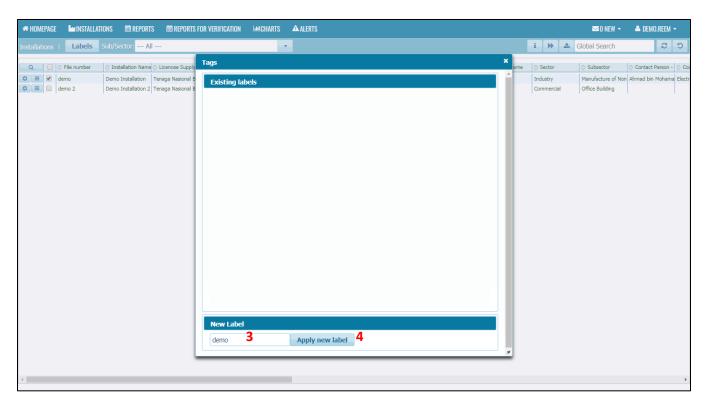

- 3. Enter the desired label.
- 4. Click apply new label.

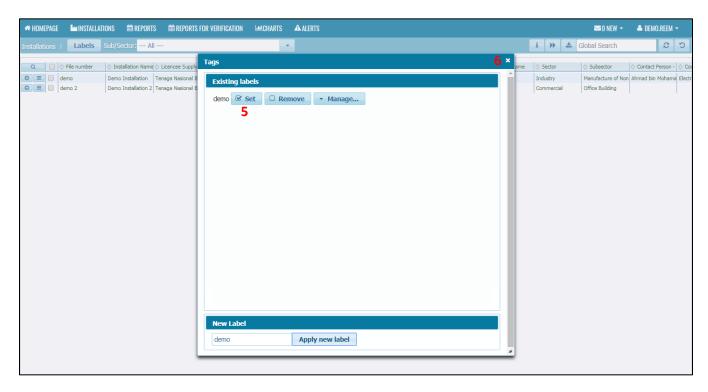


- 5. Click set to assign the label to the installation.
- 6. Click the close button.



7. Installation is now labelled.


- i. To remove the label from the selected installation, click Remove button.
- ii. To rename the label, click ____ button and select Rename.
- iii. To delete the label, click Manage... button and select Delete.

4.3 Viewing Installation's Data

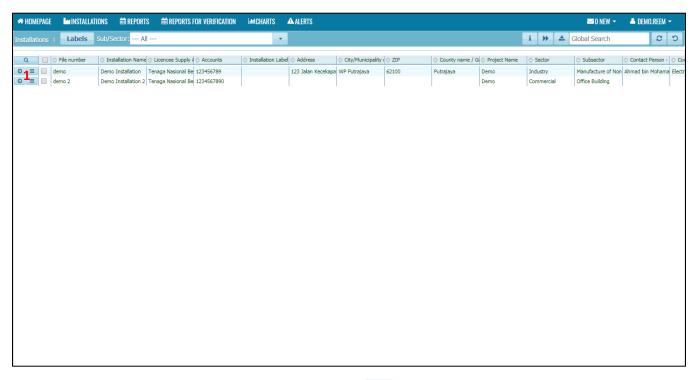

1. Access the installation either by clicking on the button or button or button and click Open. User also can access the installation by double click on the installation's row.

4.3.1 Viewing Installation's Details

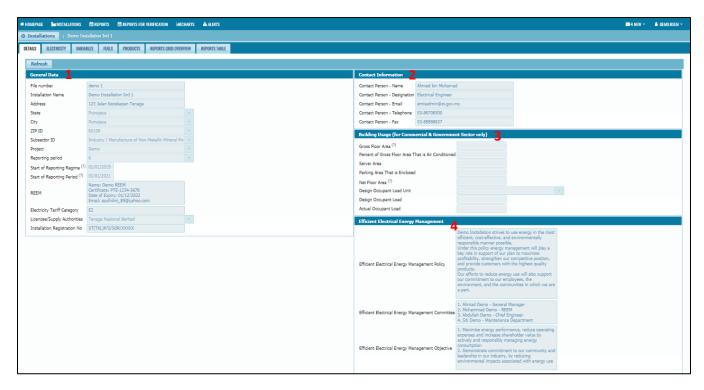

- 1. In the General Data section, REEM user is advised to review the following:
 - a. Installation Name
 - b. Address
 - c. Subsector (Installation user is required to refer to the "Guide on Selecting Subsectors and Product Types" when checking the subsector. If predefined subsector different from the actual subsector, please change it and ensure that the product type produce by the installation is within the subsector. If there is no predefined subsector set, please select the subsector based on the guideline mentioned before.)
 - d. Predefined Start of Reporting Regime and Start of Reporting Period.
 - e. REEM for the installation (if there is a change in appointed REEM, please inform EC Administrator as soon as possible either through email (emisadmin@st.gov.my), EMIS Messaging (to EC Administrator user) or official letter to Energy Commission (attention to: Energy Efficiency & Conservation Unit))
 - f. Electricity Tariff Category
 - g. Licensee/Supply Authorities Installation Registration No. (example is ST(TKL)P/S/SGR/XXXXX. If you have more than one number, please put comma (,) after each number. If you are unsure what is your installation registration number, please contact Energy Commission Regional Office.)


- i. If the installation falls under the industry sector, Installation user is required to refer to the "Guide on Selecting Subsectors and Product Types" and select carefully the subsector based on the product types produce by the installation as this product types will be defined in the Products Tab.
- 2. In the Contact Information section, REEM user is advised to review the following:
 - a. Name of the contact person
 - b. Designation of the contact person
 - c. Email of the contact person
 - d. Telephone number of the contact person
 - e. Fax number of the contact person
- 3. In the Building Usage section, this section is **only for installation that falls under Commercial and Government sector**. For installation that falls under both of this sector, REEM user is advised to review the following:
 - a. Gross Floor Area
 - b. Percent of Gross Floor Area That is Air Conditioned
 - c. Server Area
 - d. Parking Area That is Enclosed
 - e. Net Floor Area
 - f. Design Occupant Load Unit (please contact EC Administrator if the desired Unit of Measure (UOM) is not in the list)
 - g. Design Occupant Load
 - h. Actual Occupant Load

- The Gross Floor Area is defined as the floor area of a building covering the entire built-up floor area of the building.
- ii. The Net Floor Area is defined as the floor area of a building covering the entire built-up floor area of the building exclude the parking space and the outer corridor.

- 4. In the Efficient Electrical Energy Management section, REEM user is advised to review the following:
 - a. Efficient Electrical Energy Management Policy
 - b. Efficient Electrical Energy Management Committee
 - c. Efficient Electrical Energy Management Objective

i. The Efficient Electrical Energy Management Policy, Committee and Objective is mentioned in the Regulations 6 (1) of Efficient Management of Electrical Energy Regulations 2008 (EMEER 2008). Failure to comply with this subregulation means the installation commits an offence under EMEER 2008.


4.3.2 Viewing Installation's Electricity Account Number

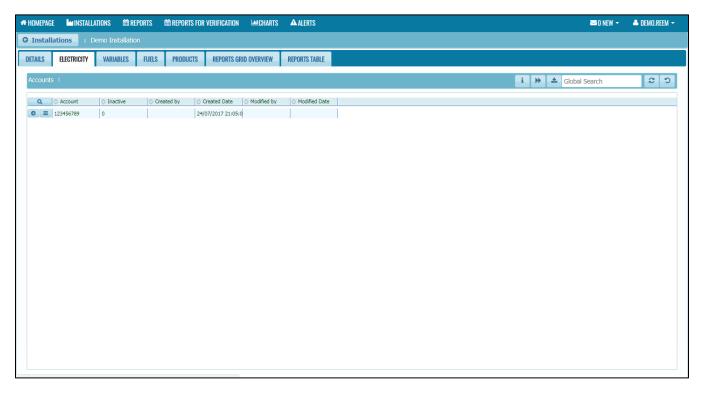

1. In the Electricity tab, REEM user can view the Installation's Electricity Account Number.

- Some installation may have more than one Licencee/Supply Authorities account number.
 Installation can only add the account that belong to the same complexes, do not add account that is in the different places.
- ii. Installation user only need to tick the inactive box if the account number is no longer in use or when the installation change to a new Licencee/Supply Authorities account number.
- iii. When creating a report for accounts, only the active ones will be available for entering new data on report. If an account should not be on a report (because it is permanently or temporarily inactive), it should be marked as inactive (it can be reactivated at any time by unchecking the box). All historical data, on already accepted reports will always be available for analysis, even if account is marked as inactive.
- iv. If an account was previously referenced in a report, its number cannot be changed.

4.3.3 Viewing Installation's Variables

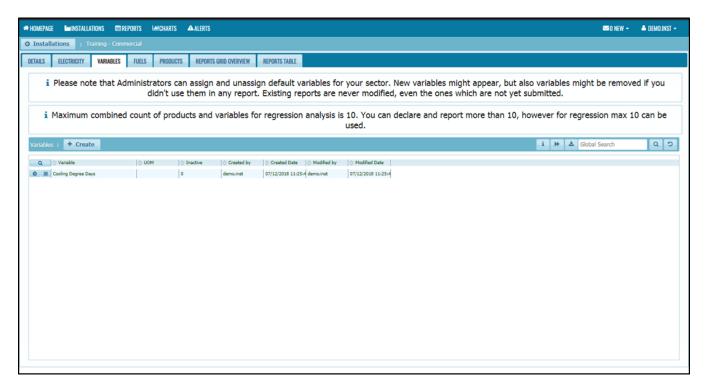


1. In the Variables tab, REEM user can view the Installation's Variables. REEM user is advised to review the variables defined by the installation user.

- i. If the desired variables (as well as Unit of Measure (UOM) for that variables) are not in the dropdown list, please contact EC Administrator and we will add it in the registry.
- ii. Installation user is advised to consult and discuss with their REEM to determine the suitable variables which affecting the electricity usage at the installation.
- iii. Installation may have more than one variables.
- iv. Only tick the inactive box if the variables are no longer applicable.
- v. When creating a report for variables, only the active ones will be available for entering new data on report. If a variable should not be on a report (because it is permanently or temporarily inactive), it should be marked as inactive (it can be reactivated at any time by un-checking the box). All historical data, on already accepted reports will always be available for analysis, even if variable is marked as inactive.
- vi. If a variable was previously referenced in a report, it cannot be deleted from this list, it can only be marked as inactive (and can be reactivated at any time).

- vii. EC Administrators can assign and unassigned default variables for specific sector. New variables might appear, but also variables might be removed if you didn't use them in any report. Existing reports are never modified, even the ones which are not yet submitted.
- viii. Maximum combined count of products and variables for regression analysis is 10. You can declare and report more than 10, however for regression max 10 can be used.
- ix. For **Commercial & Government sector**, in the variables tab there is already pre-defined variables which are **cooling degree days and occupancy**. If the user thinks that these variables does not related to the installation they may deleted it and defined other variables.


4.3.4 Viewing Installation's Fuels (if applicable)

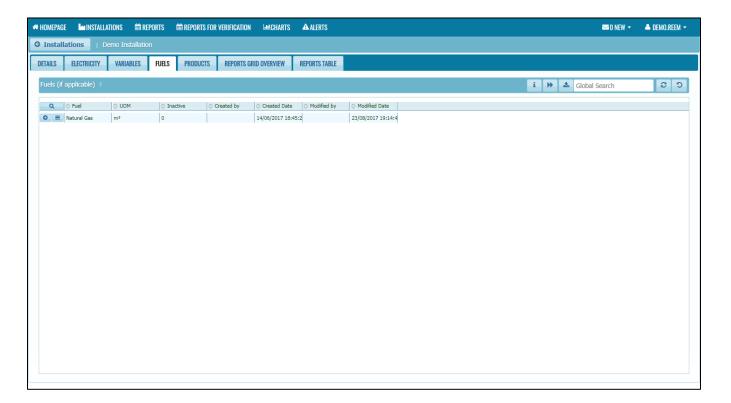

1. In the Fuels tab, REEM user can view the Installation's Fuels.

- i. Installation user is required to update this section if they are using fuel to produce electricity. If not, just leave it blank.
- ii. If the desired fuels (as well as Unit of Measure (UOM) for that fuels) are not in the dropdown list, please contact EC Administrator and we will add it in the registry.

- iii. Installation may have more than one fuels.
- iv. Only tick the inactive box if the fuels are no longer applicable.
- v. When creating a report for fuel, only the active ones will be available for entering new data on report. If a fuel should not be on a report (because it is permanently or temporarily inactive), it should be marked as inactive (it can be reactivated at any time by un-checking the box). All historical data, on already accepted reports will always be available for analysis, even if fuel is marked as inactive.
- vi. If a fuel was previously referenced in a report, it cannot be deleted, it can only be marked as inactive (and can be reactivated at any time)
- 4.3.5 Viewing Installation's Products (for Industry Sector only)

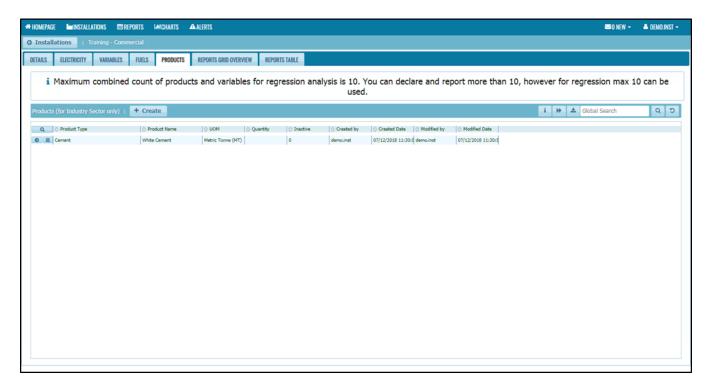


1. In the Products tab, REEM user can view the Installation's Products. REEM user is advised to review the product type defined by the installation user.

- i. This section is **only for Industry Sector**. For Commercial and Government sector, leave this section blank.
- ii. Installation user is required to refer to the "Guide on Selecting Subsectors and Product Types" first when choosing the product type. The product type must be related to the subsector (product type must be in the subsector's group) defined in the EMIS as in the guideline.
- iii. If the desired product type as well as Unit of Measure (UOM) for that product are not in the dropdown list, please contact EC Administrator. We will review the request and add the product type or UOM in the registry if necessary.
- iv. Installation may have more than one product.
- v. Only tick the inactive box if the product is no longer applicable.
- vi. When creating a report for products, only the active ones will be available for entering new data on report. If a product should not be on a report (because it was not produced in current reporting period), it should be marked as inactive (it can be reactivated at any time by unchecking the box). All historical data, on already accepted reports will always be available for analysis, even if product is marked as inactive.
- vii. If a product was previously referenced in a report, its name and UOM cannot be changed. If UOM needs to be changed a new product with the same name and different UOM should be created, and the old one should be marked as inactive. Product can be deleted if it doesn't exist on any report.
- viii. Maximum combined count of products and variables for regression analysis is 10. You can declare and report more than 10, however for regression max 10 can be used.


4.4 Viewing Report Submission

4.4.1 Reports Grid Overview

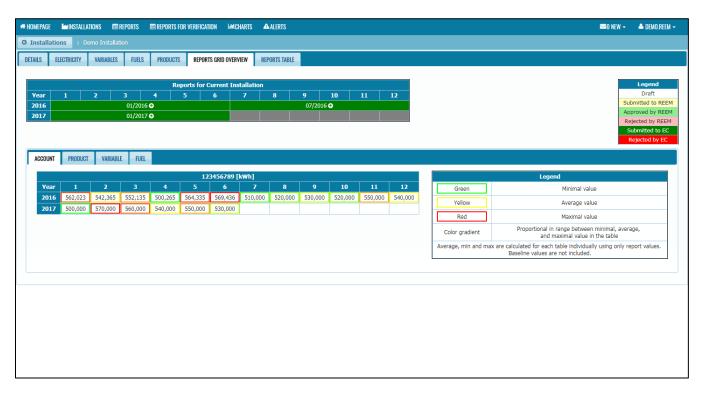

- 1. In the Reports Grid Overview tab, REEM user can view the report submitted by the installation user as well as the status of the report.
- 2. Click on the report to view the report.


4.4.2 Reports Table

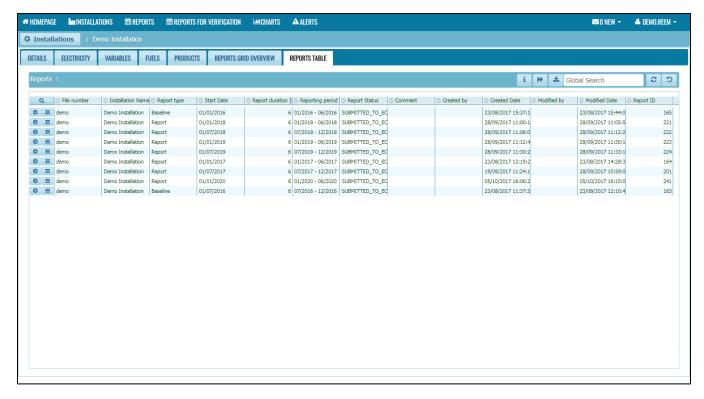

1. Reports Table section contain list of report with its status for the installation.


5. Reports

5.1 Overview

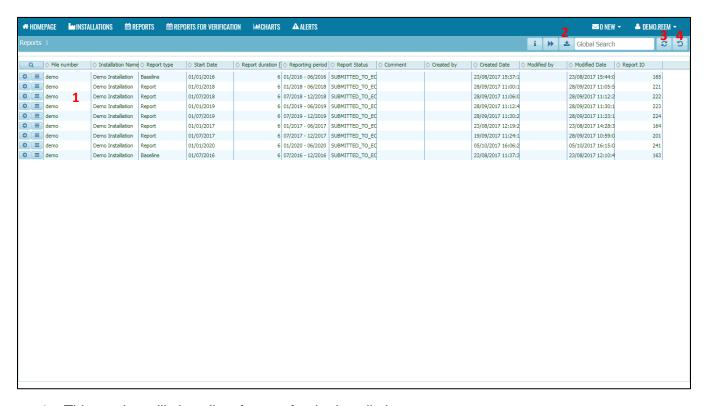


- 1. This section will show list of report for the installation.
- Export button allows the user to export the table to Excel or CSV format.
- 3. Refresh button allows user to refresh the data in the table.
- 4. Reset Table allows user to reset the table to its original state.


5.2 Generate Form A and Form B

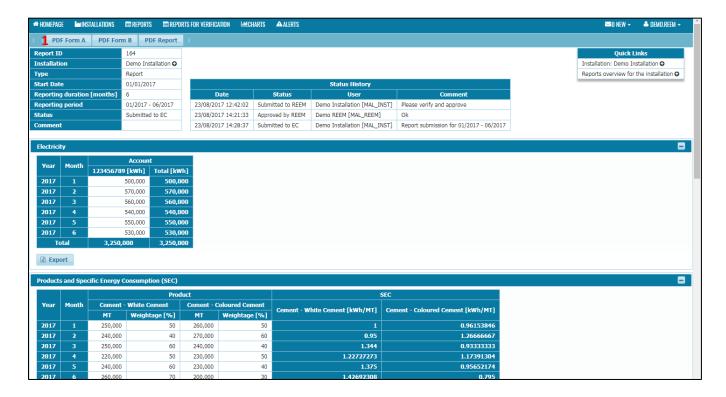

1. Opened the report that has been submitted to EC. Click on the PDF Form A button.

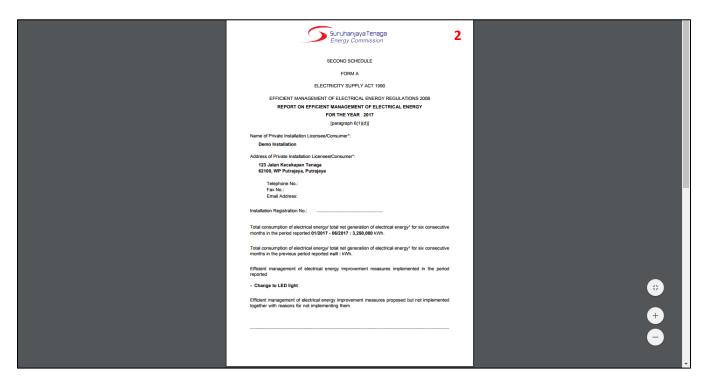

2. Form A will be generated.

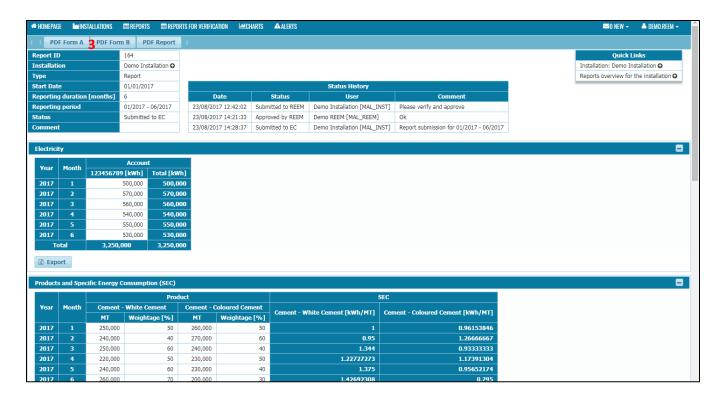

3. Click on the PDF Form B button.



4. Form B will be generated.

- i. Form A is signed by the installation.
- ii. Form B is signed by the REEM.
- iii. Both signed Form A and Form B must be submitted to EC to the following address:


Energy Efficiency & Conservation Unit,

Industry Operations Department,


Energy Commission,

12, Jalan Tun Hussein, Precinct 2, 62100 Putrajaya

5.3 Generate PDF Report

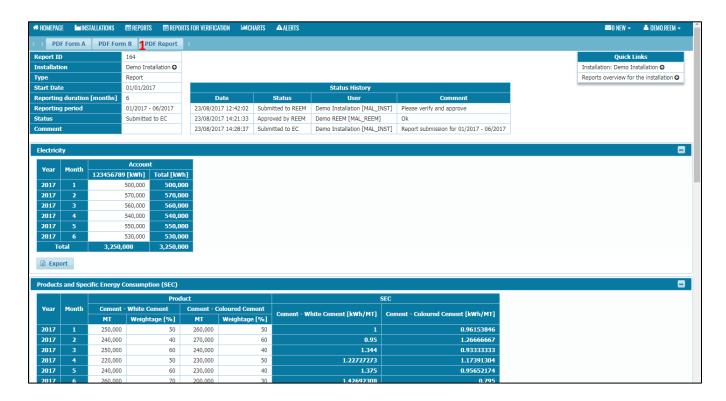

1. Opened the report that has been submitted to EC. Click on the PDF Report button.

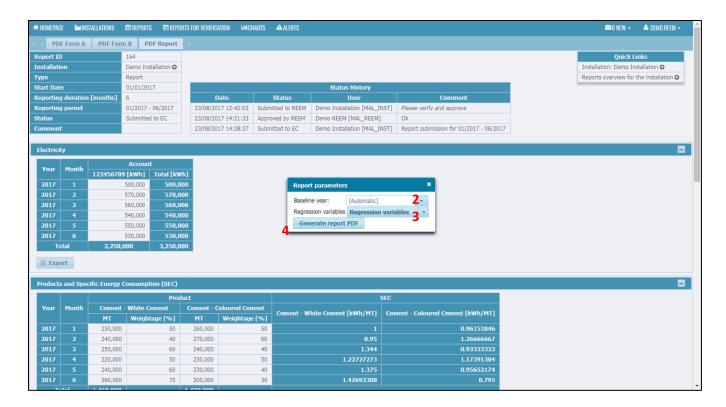

- Select baseline year.
- 3. Select regression variables.
- 4. Click on the Generate PDF report.

i. Baseline year is only available to be selected if all data for that year is complete one year. For example, year that the data is only from July – December will not be available to be selected as baseline year. The data must be completed 12 months then only the year will appear in the selection.




5. PDF report will be generated.

Note:

i. This **PDF report does not need to be sent to EC**. Only Signed Form A and Form B is sent to EC.

6. Reports for Verification

6.1 Overview

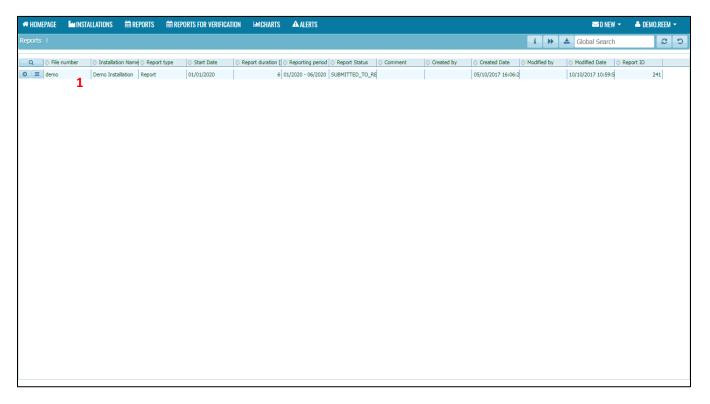


- 1. This section will show list of report submitted by the installation to REEM which require REEM to verify the report.
- 2. Access the report either by clicking on the o button or button and click Open. User also can access the report by double click on the installation's row.

Note:


i. If your REEM Certificate has expired, you are not allowed to Approve or Reject any report.

6.2 Approving the Report

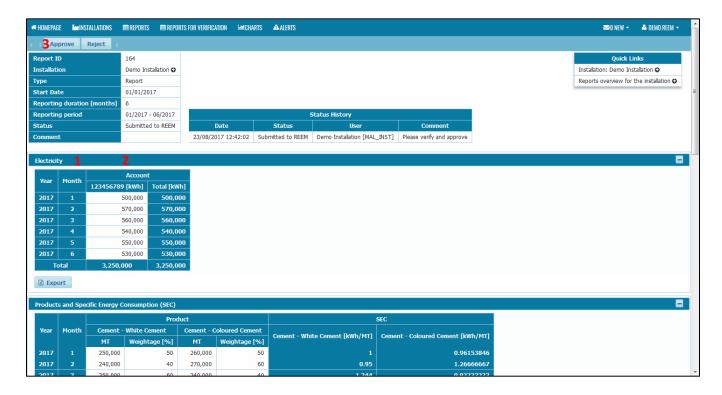

- 1. REEM user is required to review the report submitted by the installation user and verify the data is correct.
- 2. REEM need to ensure the following data is accurate:
 - a. Electricity Consumption Data Table
 - b. Production Data Table For Industry sector
 - c. Net Floor Area (m²) For Commercial and Government sector
 - d. Variable Data Table
 - e. Fuel Data Table (if applicable)
 - f. Energy Saving Data Table:
 - g. List Table This is the list of all ESM in the period reported (In progress, Completed, Rejected, Under Study / Approved by Management). If there is an ESM already completed, click the Copy completed to Summary button after filling in the data of the ESM.

- h. Summary of Implemented ESM Table This table is only for ESM that already **completed during the period of reporting**. When fill in the Yearly Savings (kWh) and Yearly Savings Cost (MYR), you can estimate it for one year if the data for one year savings is not available (example, you measure the savings for one month, and then times the savings with 12 to get estimated savings for one year). Completed ESM is only required to be reported only once, if the Completed ESM already reported in the previous report, please do not put it again to avoid double counting in the analysis chart. **Month Completed** must be in 1-12 format (example month January please write 1) while **Year Completed** must be in YYYY format (example 2017 please write 2017 not 17).
- i. Proposed Table This table is for the ESM planned in the future
- 3. If everything is correct, click on the Approve button to approve the report.

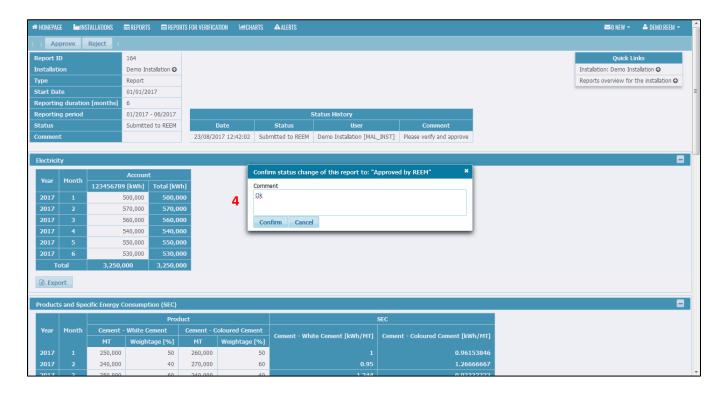


4. Enter any comment if necessary and click the Confirm button.




5. Report is now verified and Installation user is required to submit the report to EC.

6.3 Rejecting the Report

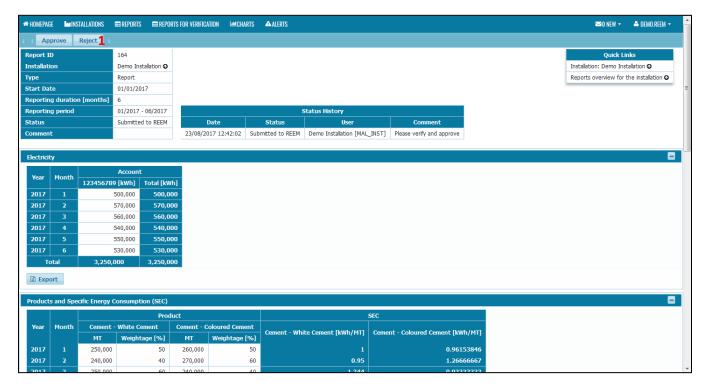


1. If there is a data that need to be corrected, click on the Reject button to reject the report.

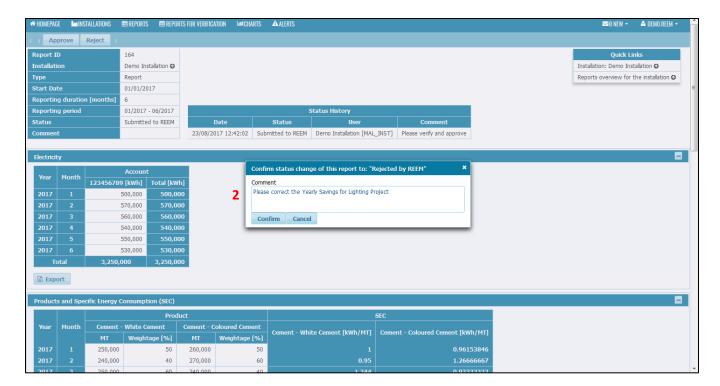

2. REEM user is required to enter comment on why the report is rejected and what are the data that need to be corrected. Click the Confirm button.

Note:


i. It is **compulsory** to enter the comment if REEM **reject** the report.

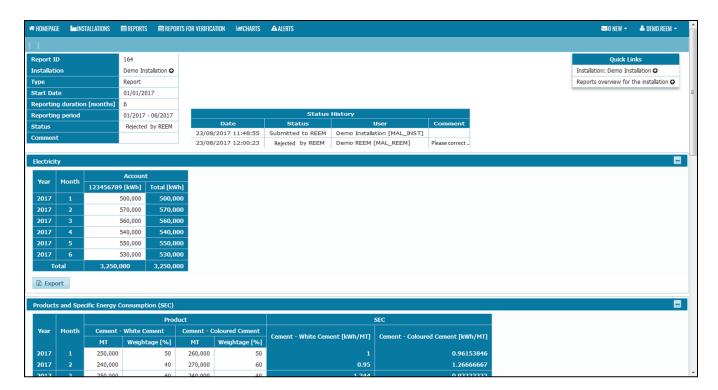

3. Report is now rejected and Installation user is required to correct the data and resubmit the report to REEM for approval.


7. Charts

7.1 Overview

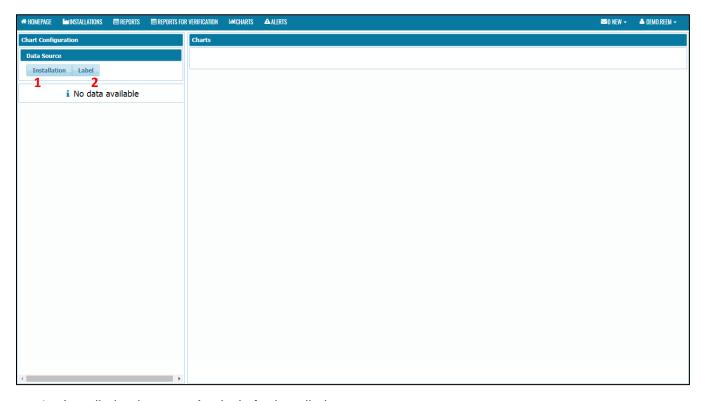


- 1. Installation button Analysis for installation.
- 2. Label button Analysis for installation with label.

7.2 Analysis

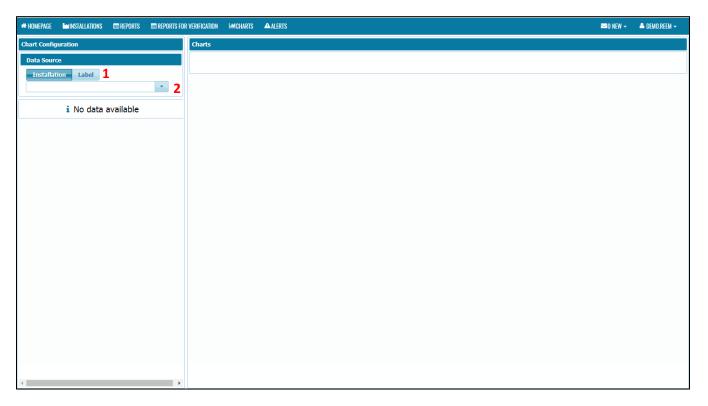

- 1. Select analysis by installation or label.
- 2. Select the installation (if analysis by installation) or label (if analysis by label)

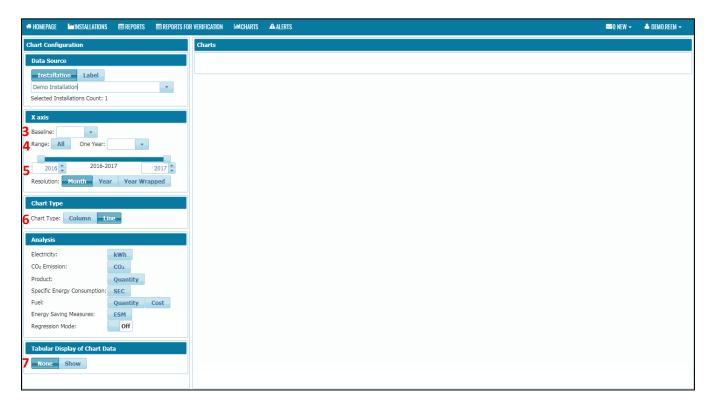

- 3. Select Baseline Year.
- 4. Select Range type (All, One Year or Range of Years)
- 5. Select Resolution (Month, Year or Year Wrapped)
- 6. Choose chart type (Column or Line)
- 7. Choose whether to show data table below chart or not.

Note:


i. Baseline year is only available to be selected if all data for that year is complete one year. For example, year that the data is only from July – December will not be available to be selected as baseline year. The data must be completed 12 months then only the year will appear in the selection.



8. Select type of analysis.

Note:

- i. For **Industry Sector**, type of analysis available is Electricity, CO₂ Emission, Product, Specific Energy Consumption, Fuel (if defined by the installation), Energy Saving Measures and Regression (need to turn on first).
- ii. For **Commercial and Government Sector**, type of analysis available is Electricity, CO₂ Emission, Building Energy Intensity, Fuel (if defined by the installation), Energy Saving Measures and Regression (need to turn on first).
- iii. To show table below the chart:
 - a) Under the Tabular Display of Chart Data, click Show.
- iv. To zoom in / out the chart:
 - a. Drag the slider above the chart
- v. To hide any series in the chart
 - a. Click on the legend of the chart.

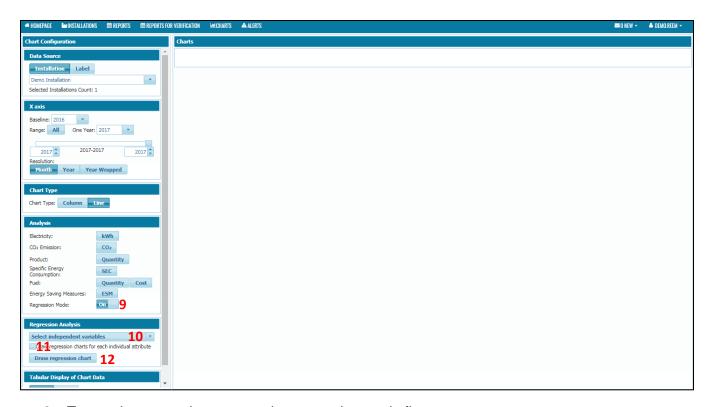

- 9. To use the regression, turn on the regression mode first.
- 10. Select the independent variables for the regression.
- 11. If you would like to draw regression charts for each individual attribute, check the box.
- 12. Click the draw regression chart button.




Note:

- i. To perform regression, baseline year must be before starting year.
- ii. Regression can only be performed if the variables (product and variables) in selected baseline year is the same as year selected.
- iii. R² and Adjusted R² value should be a minimum of 0.75 as per international practices according to International Performance Measurement and Verification Protocol (IPMVP).

8. Alerts

8.1 Overview

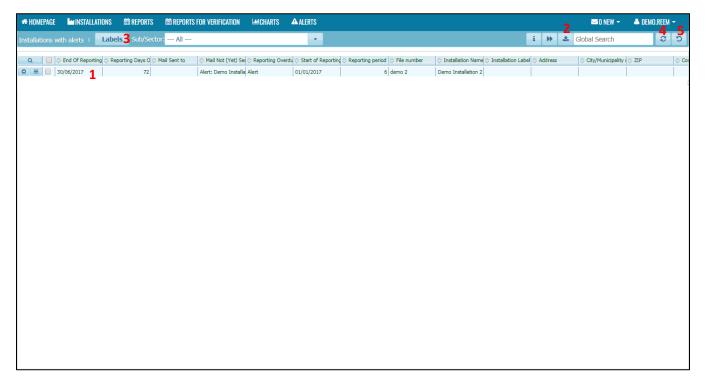

- 1. This section will show list of reminders and alerts received by the installation on report submission.
- 2. Export button allows the user to export the table to Excel or CSV format.
- 3. Labels button allows the user to label any installation to specific label/tag.
- 4. Refresh button allows user to refresh the data in the table.
- 5. Reset Table allows user to reset the table to its original state.

Note:

- i. Reminders about end of reporting period:
 - a. The day after the reporting period expires 1st warning
 - b. 15 days after the reporting period expires 2nd warning
 - c. 30 days after the reporting period expires Alert

- ii. User will be notified on the reminders and alerts through:
 - a. E-mail to Installation and REEM




b. Displayed on REEM Homepage



iii. It is responsibility of Installation and REEM user to ensure timely submission of report.


9. Messaging

9.1 Overview

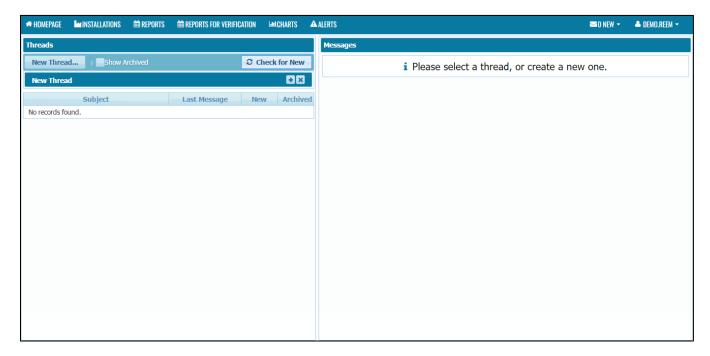


- 1. A forum-like messaging system for communication between EMIS users
- 2. Messages do NOT appear instantly click "Check for New" to see new messages
- 3. Only included participants can see a thread
- 4. A count of all new messages is displayed in the menu bar


9.2 Create New Message Thread

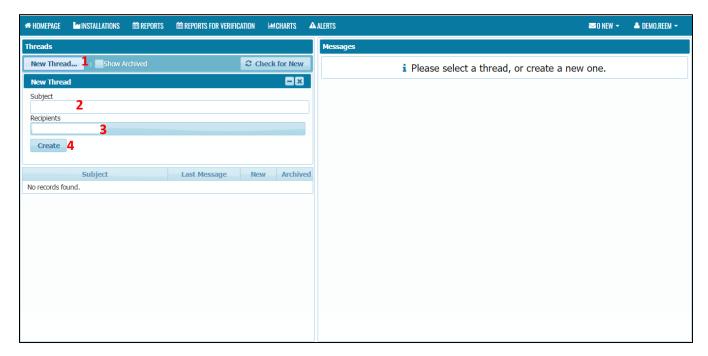

- 1. Click on New Thread button.
- 2. Enter the subject.
- 3. Find the recipient.
- 4. Click Create button

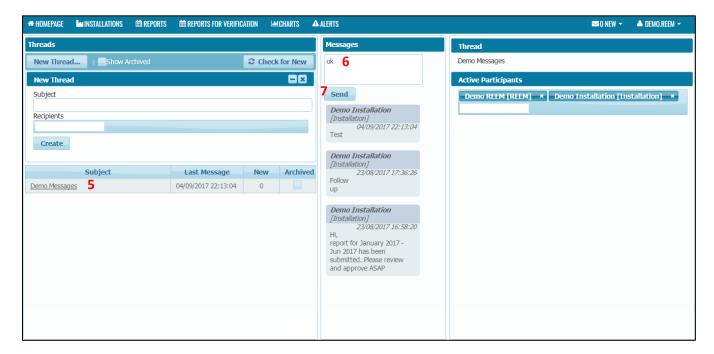


- 5. Click on the message thread.
- 6. Enter the Message in the message field.
- 7. Click Send button.

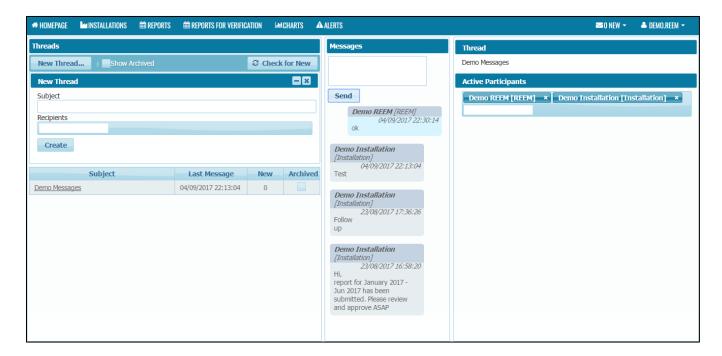

Note:

- i. An e-mail notification can be sent for each new message received.
 - a. Can be enabled/disabled in My Settings >> Send Messages to e-mail

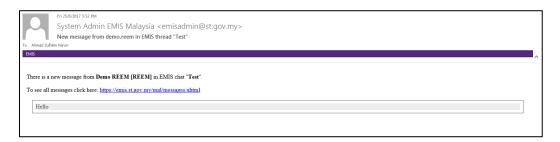

ii. A thread can be archived by ticking the archived check box.

Subject	Last Message	New	Archived
<u>Demo Messages</u>	23/08/2017 17:36:26	0	

10. Contact Us

For any problem related to EMIS, please email to emisadmin@st.gov.my or you can contact us at:

Energy Efficiency and Conservation Department Suruhanjaya Tenaga (Energy Commission) No. 12, Jalan Tun Hussein Precinct 2, 62100, Putrajaya.

Tel No: 03-8870 8680/8693/8762

